



MUD FLAP FOR MODEL Y KIT INSTALLATION

TROUSSE D'INSTALLATION DE BAVETTE GARDE-BOUE POUR MODEL Y






Preparing for Installation

The Mud Flap Kit is designed to provide added protection against rocks and small road debris that can accelerate elemental wear and tear on your vehicle's body and paint. If you drive on roads where heavy salt, sand, or gravel are commonly used to improve winter road conditions, installing this kit is the recommended way to protect your vehicle.

What's in the Box?

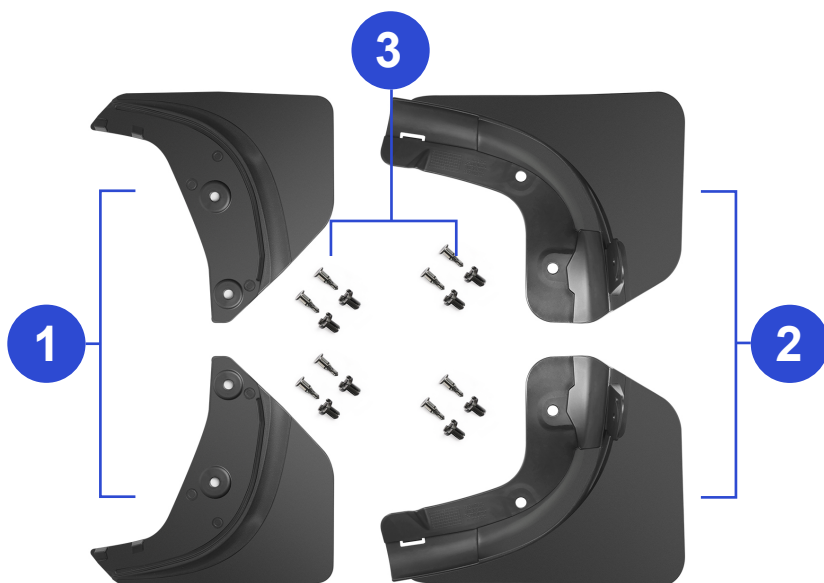

- 1. Front mud flap
- 2. Rear mud flap
- 3. Push clips (x8)

Required Tools

- Push clip removal tool or flathead screwdriver
- Screwdriver removed and installed from original car screws

Installing Mud Flaps




Perform the following to install the mud flap:

1. Clean the installation area with alcohol and allow to fully dry before installation.
2. Turn the steering wheel fully to the left to provide access to the working area.




3. Carefully use a push clip removal tool or flathead screwdriver to remove the lower push clips (x2) that secure the front wheel arch liner. Discard the push clips.

Caution: Discard the existing push clips. Do not use the existing push clips to install the Mud Flap Kit.

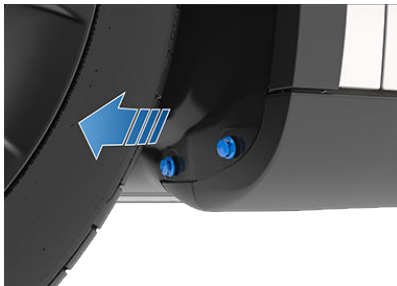


4. Maneuver the mud flap in place so that the tabs on the mud flap hook onto the backside of the front fender garnish. Make sure that the mud flap is aligned correctly with the holes in the front wheel arch liner and body of the vehicle.

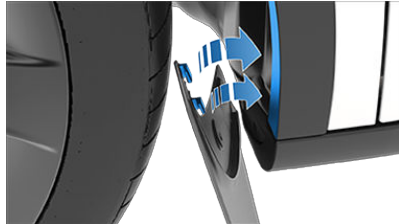


5. Install the opened (plastic rivet pulled out) new push clip into the inboard hole, and then push the plastic rivet in to close the push clip.

Note: Make sure to install the inboard push clip first.

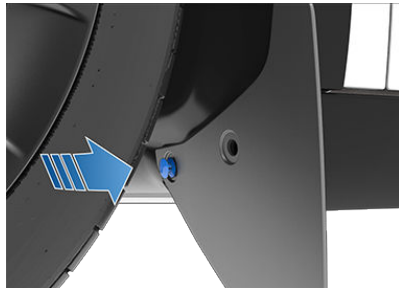


6. Install the opened (plastic rivet pulled out) new push clip into the outboard hole, and then push the plastic rivet in to close the push clip.

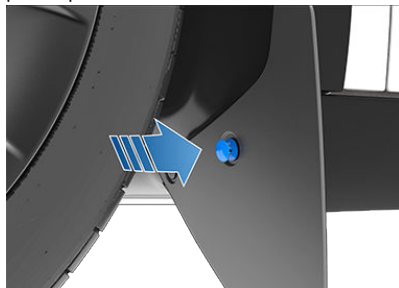

7. Perform this procedure again on the right side of the vehicle to install the right mud flap.

Note: This procedure and illustrations detailed how to install the left mud flap. Instructions for the right side are mirrored.

Installing Mud Flaps

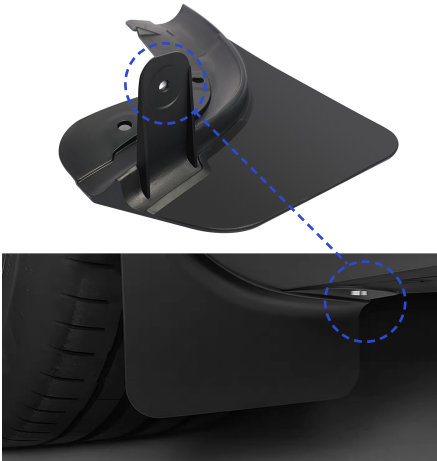

8. The installation of the rear mudflap is the same as that of the front mudflap, except that the bottom screw fixing hole is added. It is only necessary to remove the screws of the original car at the bottom before installing the mudflap, and then lock the screws of the original car after installing the mudflap.



CyberBeans